



Wonder Wood Veneer





Allows small shops to make their own Flat or Curved 3D Plywood

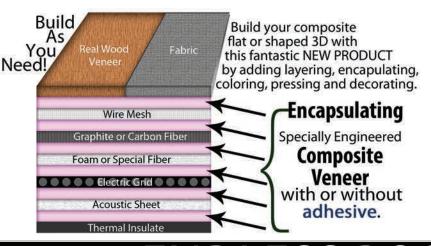

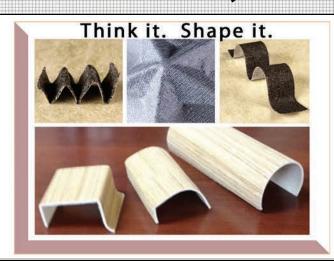

ENDLESS POSSIBILITIES

- 1. Lay up your veneer sheets dry with composite veneer that has adhesive pre-applied.
- 2. Heat approx 200F. "No pressure needed."
- 3. Put in jig/clamp/fixture for curved or flat stack with or without "Press Wrap".
- 4. Cool and remove for perfect ready to machine and sand plywood parts
- 5. Extremely stable and strong

Furniture Parts | Outdoor Signs | Skateboards | Overlays | Brackets | Musical Instruments
Chairs | Cabinets | Aircraft | Partitions | Automotive | Fixtures | Dieboards

Simply layer Composite Veneer with Other Layers

"Every Other Ply" for finest, fastest, easy to machine, tight, smooth edges with no voids, cracks or splits. Engineered water resistance and screw hold.

EXACT QUALITY. EVERY PIECE.

